

DEMARCATATION INSERTS

INSTALLATION INSTRUCTIONS

DEMARCATATION INSERTS

INSTALLATION INSTRUCTIONS

Demarcation marker caps are used to delineate parking bays, road edges or to create specialist markings depending on the specific project requirements.

Prior to filling the installed CellTrack units place the marker caps into the empty cells to create the required delineation.

Simply push the marker cap into the cell until you hear it click into place. The marker caps can be placed in any cell within a CellTrack unit.



When placing the caps ensure the cap Arrow is facing left and continue to follow this sequence for marking out the whole area (see diagram below).

CellTrack™ marker caps are available in different colours to blend or contrast with the infill and surrounding aesthetics.

The standard marker caps colours are:

- ▶ White
- ▶ Yellow

If alternative colours are required, please contact us.

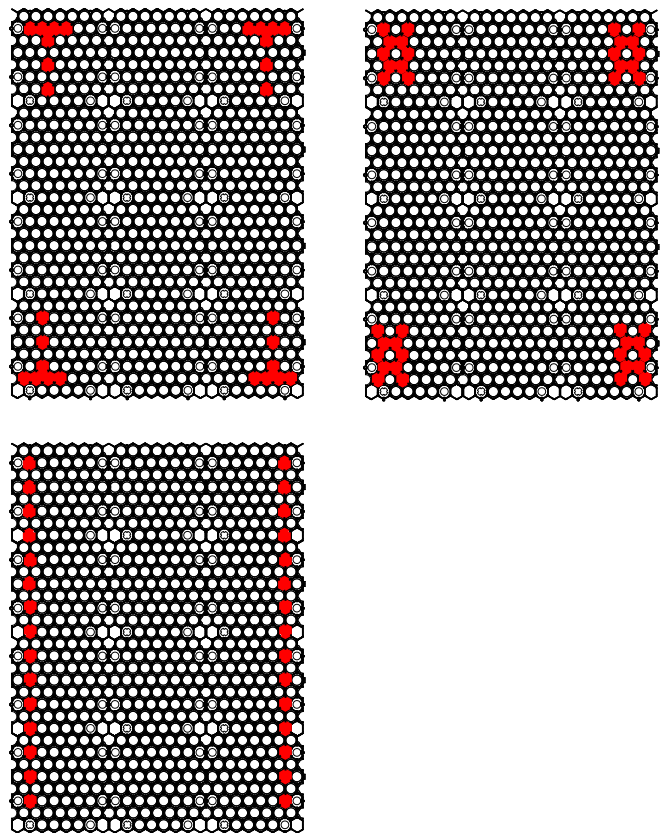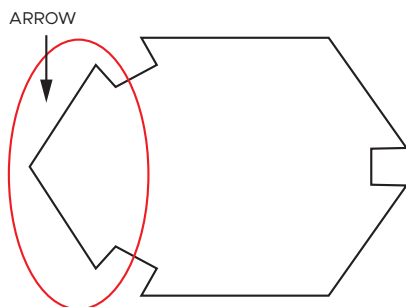

Illustrated above are three options for marker configuration.

